

0 0 0 0 0

HVAC System

Prior to installing a heating system into a new home, Poetry Living ensures the heating system selected will heat the home at a comfortable temperature, considering the climatic conditions common to your area.

Heating equipment can be maintained at maximum efficiency through regular inspections according to the manufacturer's specifications. In the event that a furnace does not start, examine the following:

- Make sure the furnace door is closed. If it is open at all, it will not turn on;
- Make sure the switch is on;
- Check exterior vents to make sure t hey are not obstructed;
- Check that the furnace filter is not clogged;

your furnace manual.

tripped breakers; andReview the operating procedures in

It is advised you become familiar with

- Check your circuit breaker panel for

the heating system for troubleshooting and maintenance purposes. It is recommended that you refrain from making any adjustments to the heating system, as any alteration or adjustment will void the 2-year warranty. In the case of an emergency, we suggest you contact the heating contractor specified on the label of the furnace. Heating system outlets and cold air returns should be kept free from airflow obstructions such as carpets, drapes and furniture to maximize performance.



Register your HVAC equipment on the

manufacturer's website. Some manufacturer's will extend warranty on additional parts if registration is within 60 days of possession of the home; and it is suggested you replace the furnace filter every 3 months.

